

Events and Actions

Steps


You can set actions (behavior) for events of HMI objects.
Example actions: Page switching / Subroutine start / Troubleshooting display

- ① Place the object to set the action (behavior).
- ② Display the Events and Actions Window.
- ③ Select the event that will trigger the action (behavior).
- ④ Select the action (behavior) for the event.
- ⑤ Configure detailed action (behavior) settings.

Detailed Steps


① Place the object to set the action (behavior).

Drag and drop an object from the toolbox onto the edit pane.

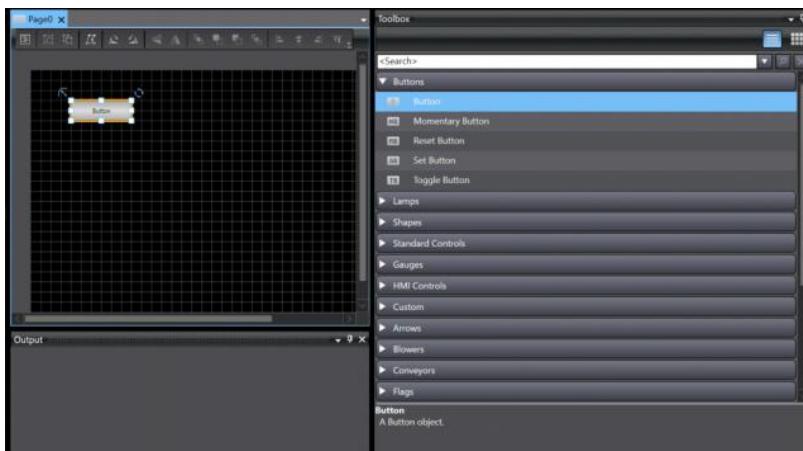


② Display the Events and Actions Window.

Click [View] - [Events and Actions] from the menu bar.

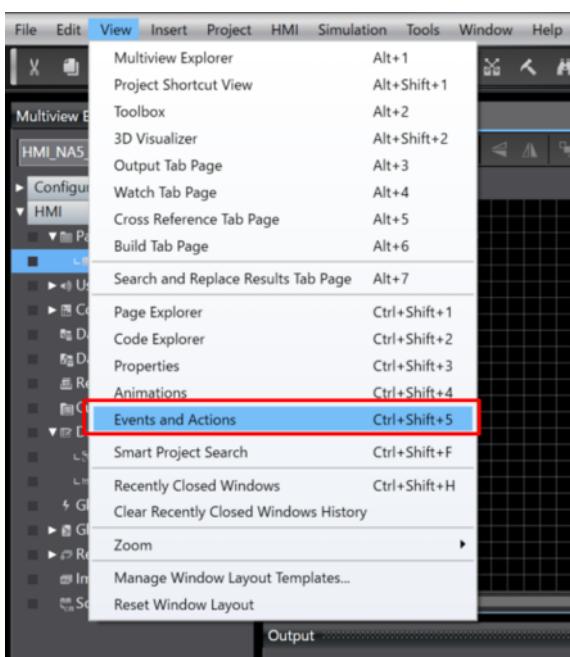


③ Select the event that will trigger the action (behavior).

Select the event item from the “Events” dropdown list in the Events and Actions Window.

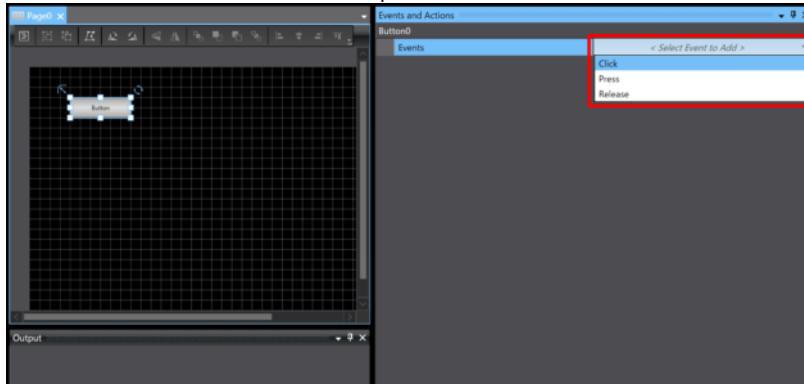


④ Select the action (behavior) for the event.

Select the action (behavior) for the selected event.

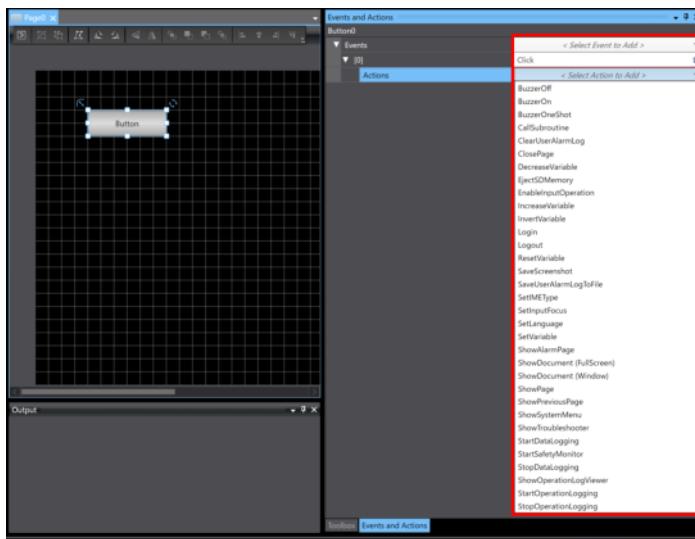

⑤ Configure detailed action (behavior) settings.

Configure the settings for the action.

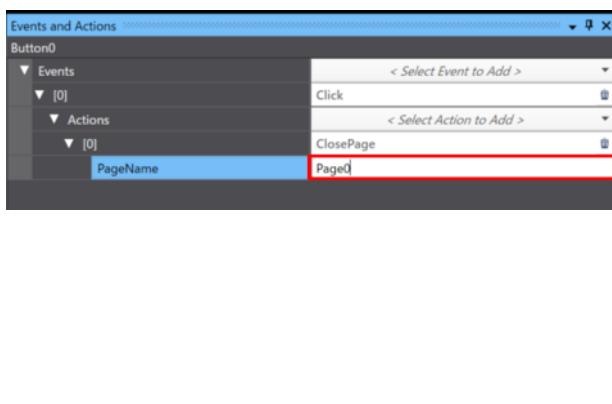

Remarks

For details on Events and Actions, refer to the NA-series Programmable Terminal Software User's Manual (Cat. No. V118).