

Changing Device Revisions

Steps


This section describes how to replace a device to a different Rev. inheriting the set values.

- ① Open the EtherCAT Tab Page.
- ② Select the device to replace and select [Change Model].
- ③ Select the model (Rev) to change to.

Detailed Steps


- ① Open the EtherCAT Tab Page.

Double-click [EtherCAT] under [Configurations and Setup] in the Multiview Explorer.

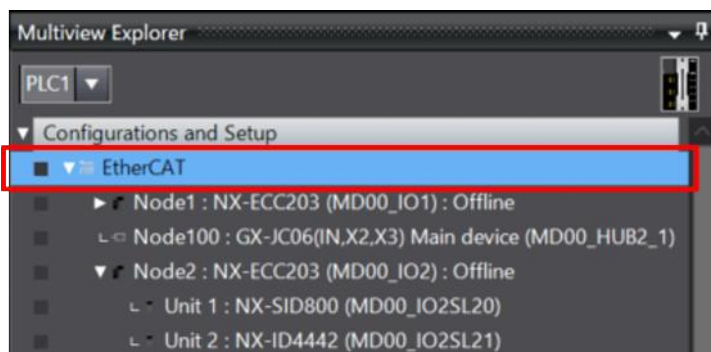


- ② Select the device to replace and select [Change Model].

Click on the device to be replaced and select it in the network configuration.

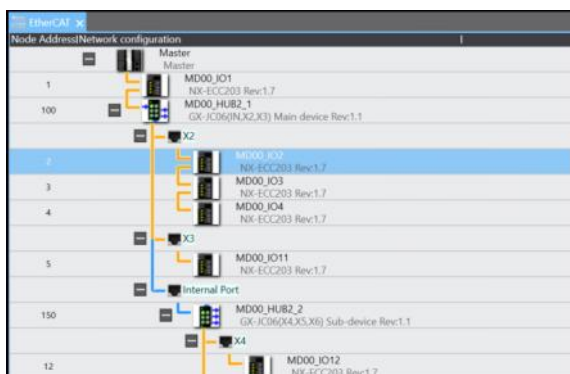


Right-click and select [Change Model].

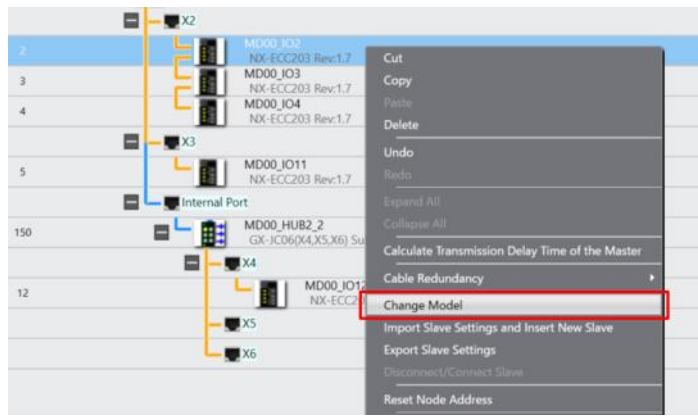

③ Select the model (Rev) to change to.

Select the target model (Rev) and click the [OK] button.

If the version you want to replace to is not displayed, select the "Show all versions" check box.

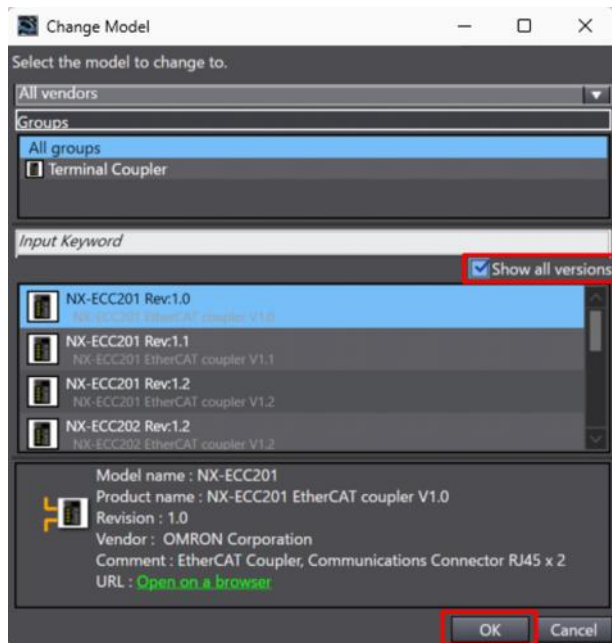

Remarks

Servo Drives can also be replaced while inheriting the set values when the Rev is changed.

