


## Monitoring -2 Changing the Current Parameter Value

Change the current value of contact or channel through conductive monitoring.

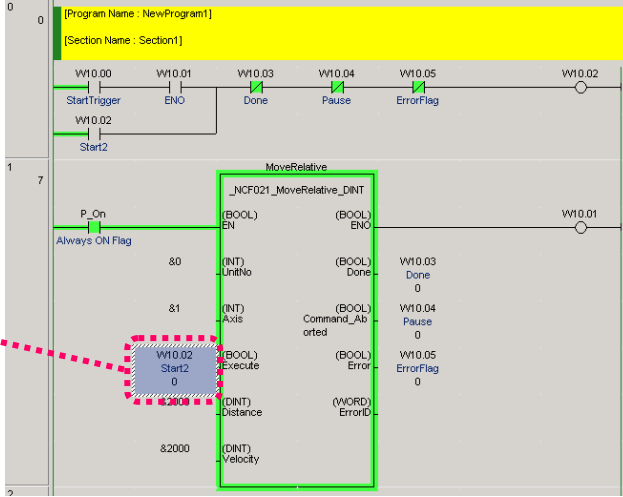

Move the cursor to D100 of input parameters

Right-click, then select [Set/Reset (S)] > [Value (V)] from the pull-down menu

or

Double-click

Or



Change current value of the input parameter.

The 'Set New Value' dialog box has the following fields: 'Address' with value 'W10.02', 'Data type' with a dropdown menu set to 'BOOL', and 'Value' with a text box containing '1'. Below these fields is a display area showing '0, 1 (OCH)'. The 'Set' button is circled in red.

Click

Ensure to add "#" (hexadecimal/BCD) or "&" (decimal) to the left of the value.

